

Remote Control User Guide

GVTV

CREATE FAVORITE LISTS:

There are 12 pre-defined favorite named lists and you may create up to 5 additional Favorites Lists.

1. Press Menu. Arrow down to 'My TV' and then arrow right to 'Edit Favorites'. Press OK.
2. With your Favorite List highlighted, arrow down to move the channel list. Channels included in the Favorite List are marked with a P. Using the Arrow buttons, move through the channels and press OK to add or remove a channel to your Favorite List. Or, type in a channel using the number keys.
3. When done, press the Blue button to save your changes.

Using Favorite Lists:

1. Press FAV. By default, your list is 'All' channels.
2. Arrow up/down to choose a Favorite list. Press OK with a Favorite List selected, you will be in Favorites mode using that list.
3. Use either the Channel Up/Down button or the Arrow buttons to move between channels in a list. Or, use the number keys to select a channel. The 'Info Bar' shows the name of the active favorite list.
4. To leave a Favorite mode, press FAV. Arrow up/down to select 'All' and press OK.

PARENTAL CONTROLS

There are several ways to use Parental Controls. From the Main Menu, select My Settings. Arrow to the right, highlight Parental and press the OK button. You will then be in the Parental Controls menu to:

Change PIN:

Select the Change PIN category to enter your new PIN and confirm it. Until you change it, the default PIN is 0000.

Edit Locked Channels:

You can lock entire channels via the Edit Locked category so that it requires a PIN to view programming. You may prevent locked channels from showing in the channel guide via the Parental Control Options (locked channels would still be accessible using the number keys and entering a PIN).

Set Program Rating Limits:

To control the types of programming that can be viewed, you may set program limits based on motion-picture ratings (G, PG, R, etc.) or TV ratings (TV-G,TV-14, etc.) using the Set Ratings category. If you attempt to tune to a channel that is airing a program with a rating at or above your rating limit, you must enter a PIN to view the program.

Set Time Restrictions:

The Time Restrictions category allows you to set time periods per day where television access requires a PIN. These time restrictions may be set by selecting the Green button to Add Restriction under the Time Restrictions category.

Cancel Override:

Cancel Override category allows any previous PIN overrides for an extended period of time to be canceled. Once the override has been canceled, the parental PIN will need to be used for all Locked and Rated channels.

REMINDERS


Set Reminders: While viewing the guide, highlight the program where you want a reminder and press OK.



2.12.18

Remote Control User Guide

GVTV

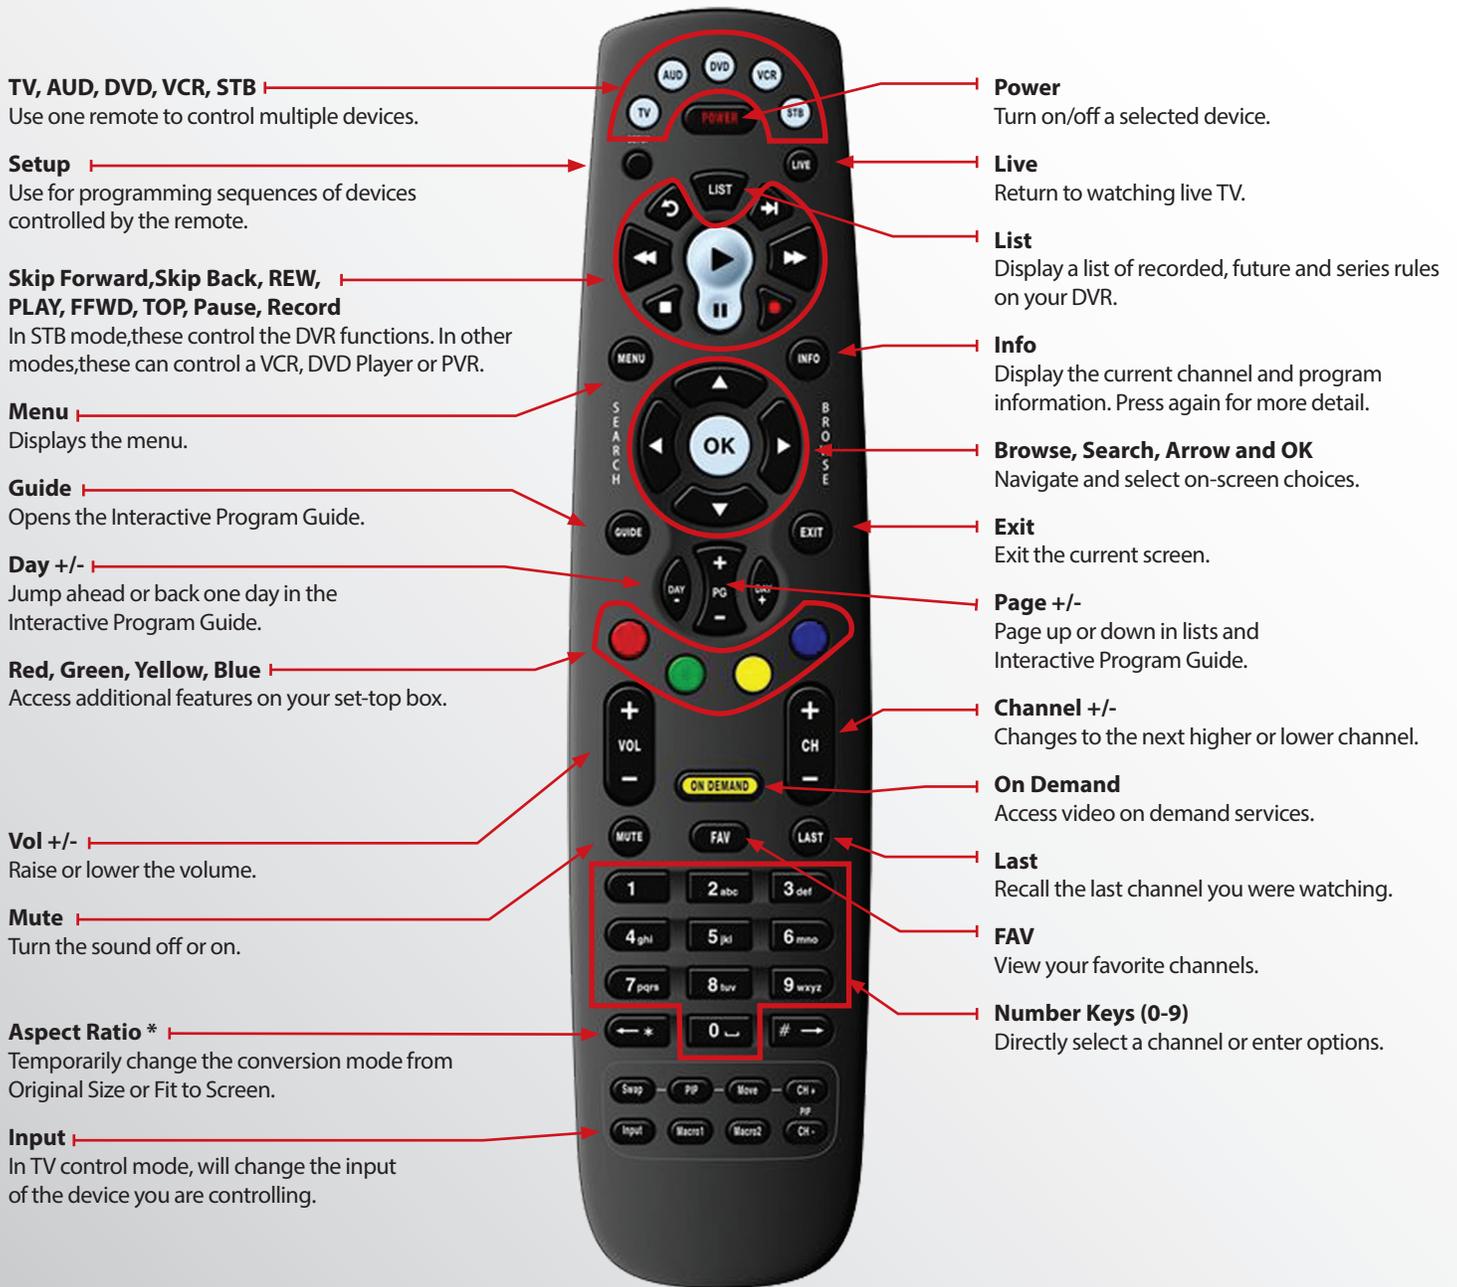

WHAT'S ON TV?

There's more than one way to see what's showing on TV.

Info Button: Press Info and you will see the name and description of the current program at the top of the screen.

OK Button: Press OK to show the 'Now Playing' bar and you will see what program is currently playing.

Guide Button: This is the most comprehensive view of what's on. Go ahead and page through, you're bound to find something to watch.

Browse Button: Press Browse (right arrow) to show the channel you are currently tuned to at the top of the screen. At the bottom of the screen, the 'Info Bar' shows you the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.